GM99





Goes Anywhere You Go

- •Live Tracking
- SOS Button
- •IP67 Water Resistant
- •Two Way Audio
- Resistant Rugged Design


Functions


- •GPS + LBS + WiFi positioning (WiFi positioning optional)
- •GPS Blind Spot Alarm
- •SMS/GPRS/UMTS(TCP/UDP)communication
- •Low Power alarm for internal battery
- •3D Shake wakeup
- •Listen-in/Two-way Calling
- •Stillness/Movement Alarm

GM99



APPEARANCE

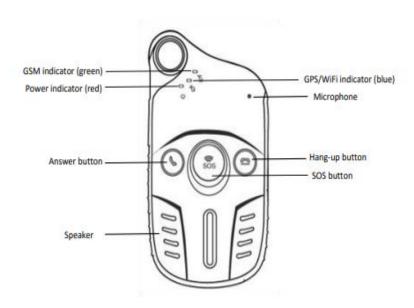

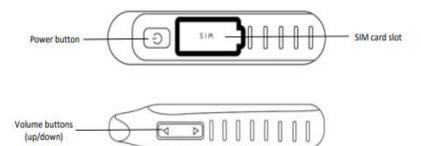

GM99



LED INDICATOR

Power On: Press and hold down the power button for 3–5 seconds. Then the LED indicators will blink.

Power Off: Press and hold down the power button for 3 seconds. Then the LED indicators will blink for at most 25 seconds

Indicator	Indicator Status	Description
GPS indicator (blue)	Blink (every 0.1 seconds)	The device is being initialized.
	Blink (0.1 seconds on and 2.9 seconds off)	A GPS signal is received.
	Blink (1 second on and 2 seconds off)	No GPS signal is received.
	Steady off	The device is turned off or is in sleep mode, or the GPS module stops.
WiFi indicator (blue)	Blink (0.1 seconds on and 2.9 seconds off); 2 times	A WiFi hotspot is available.
	Blink (1 second on and 1 second off); 3 times	The WiFi positioning function is disabled or no WiFi hotspot is available.
GSM indicator (green)	Steady on	A call is coming in or a call is being made.
	Blink (every 0.1 seconds)	The device is being initialized.
	Blink (0.1 seconds on and 2.9 seconds off)	A GSM signal is received.
	Blink (1 second on and 2 seconds off)	No GSM signal is received.
	Steady off	The device is turned off or is in sleep mode.
Power indicator (red)	Steady on	The device is charging.
	Steady off	The device is fully charged or works properly.
	Blink (0.3 seconds on and 0.3 seconds off)	The battery power is low.